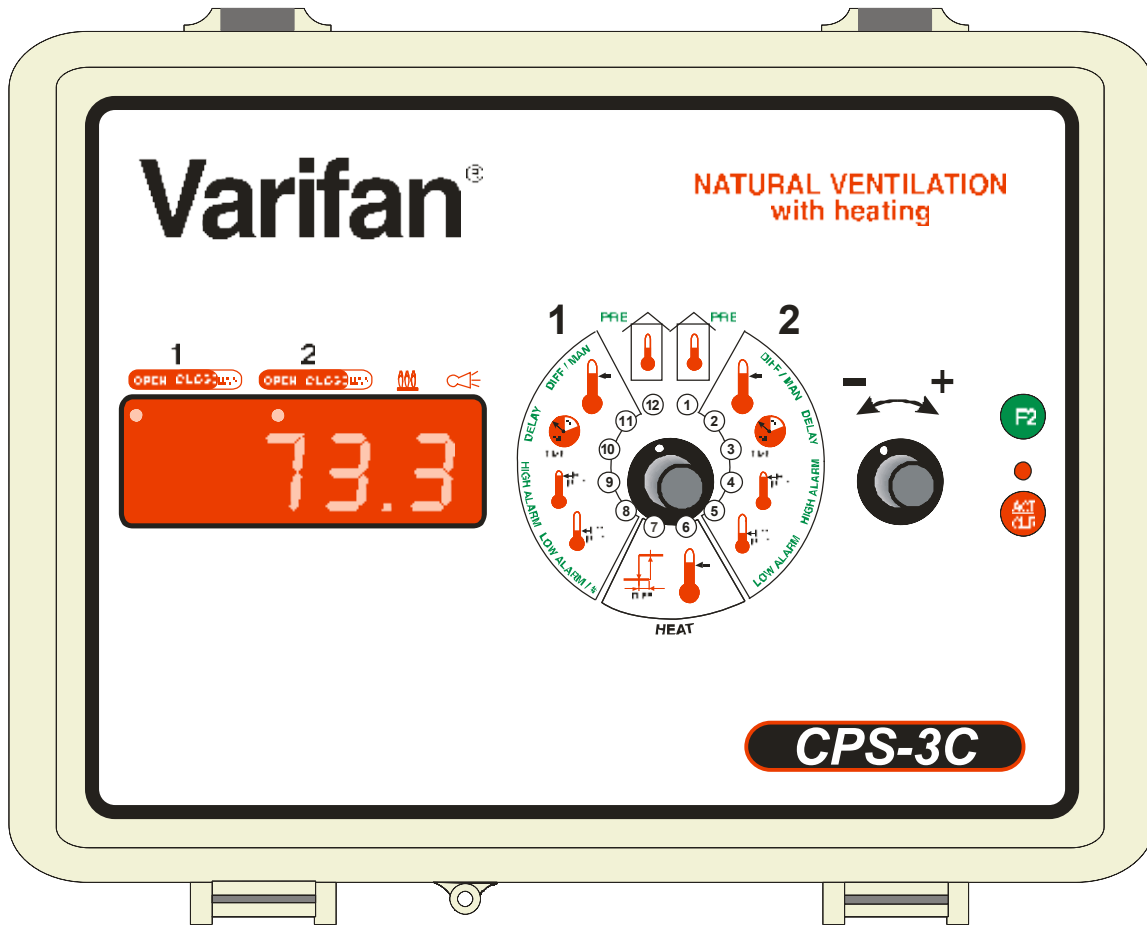


MANUAL

CPS-3C



Installation / User's Guide

ATTENTION ELECTRICIAN
SEE WIRE DETAILS ON PAGES A-3 TO A-5 AND
ADDITIONAL INFORMATION IN SECTION B

WIRING DIAGRAM

SECTION A

INSTALLATION GUIDE

SECTION B

USER'S GUIDE

SECTION C

INDEX / WARRANTY

SECTION D

CPS-3C WIRING DIAGRAM**WARNINGS AND PRECAUTIONS**

Although the manufacturer has made every effort to ensure the accuracy of the information contained herein, this document is subject to change without notice due to ongoing product development.

WARNINGS AND PRECAUTIONS

Equipment, probe failure, blown fuses and/or tripped breakers may prove harmful to the contents of the building. Therefore it is strongly recommended to install backup devices and alarm or warning devices. Spare equipment should also be available at the owner's site. Equipment manufactured by the manufacturer is protected against normal line surges. High surges caused by thunderstorms or power supply equipment may damage this equipment. For added security against line voltage surges it is recommended that surge and noise suppression devices be installed at the electrical distribution panel. Use of shielded cable for probes is recommended for protection against lightning. These devices are available from most electrical supply distributors.

RECOMMENDATIONS

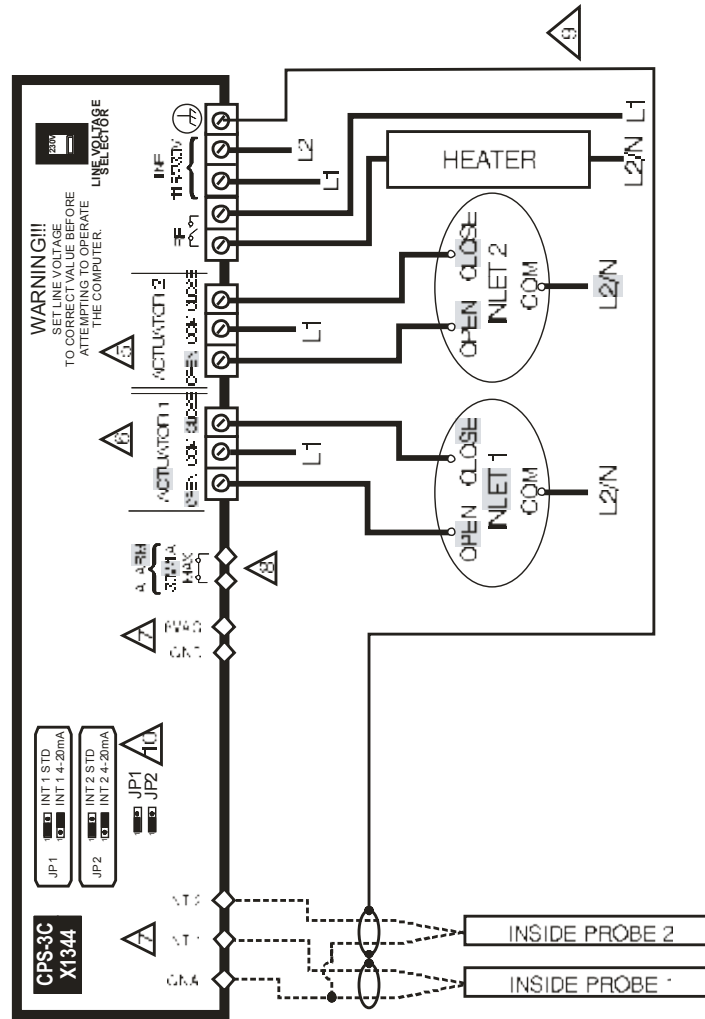
The manufacturer recommends that all installation procedures described herein be performed by a qualified electrician or installation technician. Furthermore the manufacturer recommends testing all the functions and equipment connected to the CPS-3C, including the alarm system and backup devices, after installation, after changes to the installation and every month after that.

Fuse verification and replacement, as well as the proper setting of control values shall be the responsibility of the owner of this equipment.

WIRING DIAGRAM CPS-3C SECTION A

CPS-3C WIRING DIAGRAM

WIRING DIAGRAM CPS-3C



Varifan®

WIRING DIAGRAM

CPS-3C

VARIFAN

SEE NOTES ON PAGE A-5

CPS-3C

Electrician's notes

- 1 ----- (PROBE WIRING) SHIELDED WIRE AWG #22 WITH 16/30 STRANDING, 500ft (150m) MAXIMUM LENGTH (Ex.: DECA 73-310).
For other probe, refer to specific probe manual for appropriate maximum length and wire size or use AWG #22, 500ft (150m) MAXIMUM LENGTH.
- 2 ————— (COMMUNICATION WIRING) SHIELDED LOW CAPACITANCE WIRE, (Capacitance between conductors @ 1Khz = 24pF/ft), TWISTED PAIR (8 twist/ft), AWG #22, 820ft (250m) MAX LENGTH (Ex.: BELDEN 8761).
- 3 ————— HIGH VOLTAGE WIRE INSTALLED ACCORDING TO LOCAL WIRING CODE.
- 4 INSTALL LOW VOLTAGE WIRES (PROBES OR COMPUTER LINK) AT LEAST 12in. (30cm) AWAY FROM HIGH VOLTAGE WIRES (120/230VAC, 24VDC). ALWAYS CROSS HIGH AND LOW VOLTAGE WIRES AT A 90-DEGREE ANGLE.
- 5 RELAYS: 10A @ 240VAC RESISTIVE, MOTOR 1HP @ 240VAC, 1/2HP @ 120VAC AT EACH OUTPUT.
- 6 MAXIMUM 2 WIRES OF SAME SIZE PER BLACK TERMINAL, NO BIGGER THAN AWG #12, NO SMALLER THAN AWG #22.
- 7 1 WIRE ONLY PER GREEN TERMINAL. USE WIRE CONNECTOR IF YOU WANT TO CONNECT MORE THAN 1 WIRE, NO BIGGER THAN AWG #12, NO SMALLER THAN AWG #28.
- 8 CHECK INSTALLATION GUIDE FOR ALARM WIRING.
- 9 USE SHIELD FOR SHIELDING PURPOSE ONLY. CONNECT THE SHIELD TO GROUND PLATE⊕. NEVER LEAVE THE SHIELD UNCONNECTED AT BOTH ENDS. NEVER CONNECT BOTH ENDS OF THE SHIELD TO GROUND PLATE⊕. THE USE OF A SHIELD FOR ALL PROBES IS **MANDATORY**.
- 10 FOR THE TEMPERATURE MODE, THE JUMPERS MUST BE SET TO STD (STANDARD). FOR STATIC PRESSURE MODE, THE JUMPERS MUST BE SET TO 4-20MA.

INSTALLATION

CPS-3C

SECTION B

This section will inform the electrician on proper wiring and installation procedures for the CPS-3C.

The manufacturer recommends that the following installation instructions to be followed as closely as possible, and that all work be performed by a certified electrician. Failure to do so may void the warranty.

Unpacking

Unpack the CPS-3C and inspect contents for damage. Should the contents appear to be damaged, contact your local distributor to return the equipment.

The package should contain the following standard items:

- 1 CPS-3C Control
- 4 Brackets / 4 Screws
- 2 2004-10K Temperature Probe
- 1 Installation / User's Guide

Mounting Hardware Required

This is the list of the mounting hardware needed, which is not included with the product:

- Shielded two-wire cable, AWG #22 (to extend probes)
- Shielded two-wire twisted pair cable, AWG #22 (used for communication) see electrician note for capacitance selection.
- 4 screws (to hang the unit onto the wall)
- Screwdrivers
- Soldering iron kit or approved sealed connectors.
- Drill and hole saw kit

General installation guidelines

CPS-3C Control

- It is recommended to install the unit in a hallway to limit the CPS-3C exposure to noxious gases.
- In order to avoid condensation problems inside the controller, it is recommended to install the CPS-3C on an inside wall. If it is not possible, use spacers to have an air gap between the wall and the CPS-3C.
- It is required to install the CPS-3C side up with the cable entry holes facing down.
- The enclosure is watertight, but do not spray water or immerse the CPS-3C in water. Cover it carefully with plastic when cleaning the room.
- The CPS-3C should be installed in easy access location but away from damaging elements (heat, cold, water, direct sunlight, ...).
- Do not drill the face, the side, the top or the rear of the control.
- Do not install the CPS-3C control near high voltage equipment, power supply or transformer.

Electrical Cables

- All electrical cables must be installed according to local wiring codes.
- All cable shields must be connected to the CPS-3C power ground only, except for the cable connected to the optional PC interface. The shield is needed to protect the CPS-3C and the modules against any electromagnetic interference generated by lightning or nearby operating machinery.
- Never use the shield as a conductor.
- Connect only one end of the shield to the ground of the CPS-3C.
- Use separate conduit for the low voltage cables (communication and probes) and the high voltage cables. There must be at least 1 foot (30 cm) between low voltage and high voltage conduits.
- If a low-voltage cable has to cross over a high voltage cable, make this crossing at 90°.
- All cable connections must be soldered or done with approved sealed connectors.
- Probe cables must be 500' (150m) or less.
- Communication cables must be 820' (250m) or less.
- It is prohibited to use overhead cables outside the building.

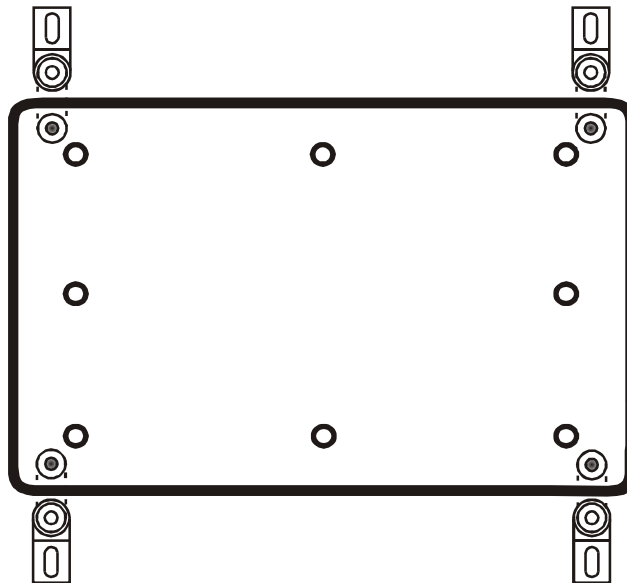
Electrical Power

- Protection from electrical surge should be included in the planning of each installation.
- It is strongly recommended to have a backup power source to ensure life-sustaining conditions in case of power failure (see figure 4).
- The backup system and alarm must be thoroughly tested and verified as working properly before using the ventilation system.

Mounting

- The enclosure must be mounted in a location that will allow the cover to be completely opened right up against the wall.
- Fasten the four brackets to the four mounting holes on the back of the enclosure, using the four screws provided with the brackets.
- Then mount the enclosure on the wall by inserting screws through the brackets' adjustment slots, into the wall. Make sure to position the enclosure so that all wires extend out of the bottom section of the enclosure.
- The bracket slots also serve to adjust the position of the controller.
- Once you have adjusted the controller position, tighten the four mounting screws.

FIGURE NO. 1 Mounting Position and Devices



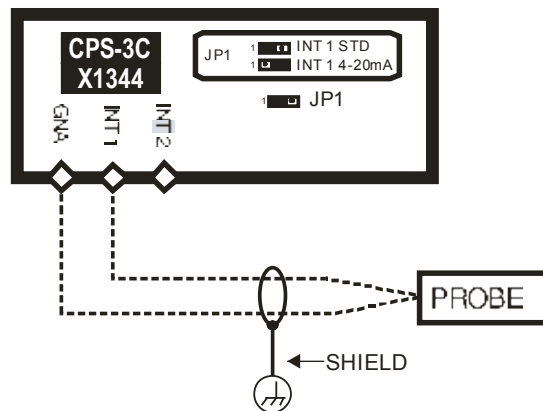
Connection Procedure

Detailed Wiring Diagrams

Typical Sensor Wiring for Probes

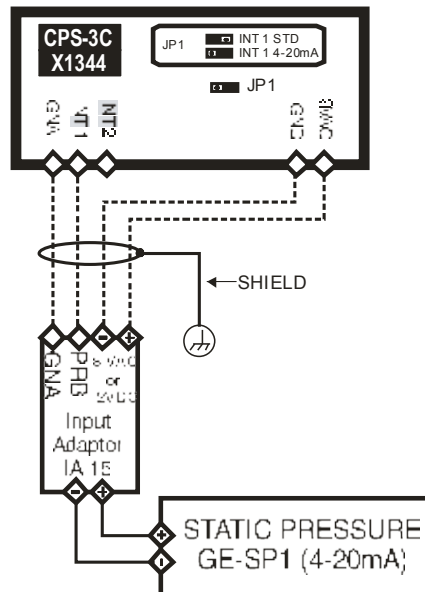
The inside temperature sensor should be located in the area which gives the most accurate temperature reading to achieve optimum ventilation. The sensor should also be connected to the CPS-3C with a shielded two-wire cable. It should be located in an area protected from operating machinery, animal bites, personnel or anything that could damage the sensor. See also "General installation guidelines".

FIGURE NO. 2 Typical Temperature Probe Wiring



Note: Jumper must be set to STD mode in order to use the temperature mode.

FIGURE NO. 3 Typical Static Pressure Probe Wiring

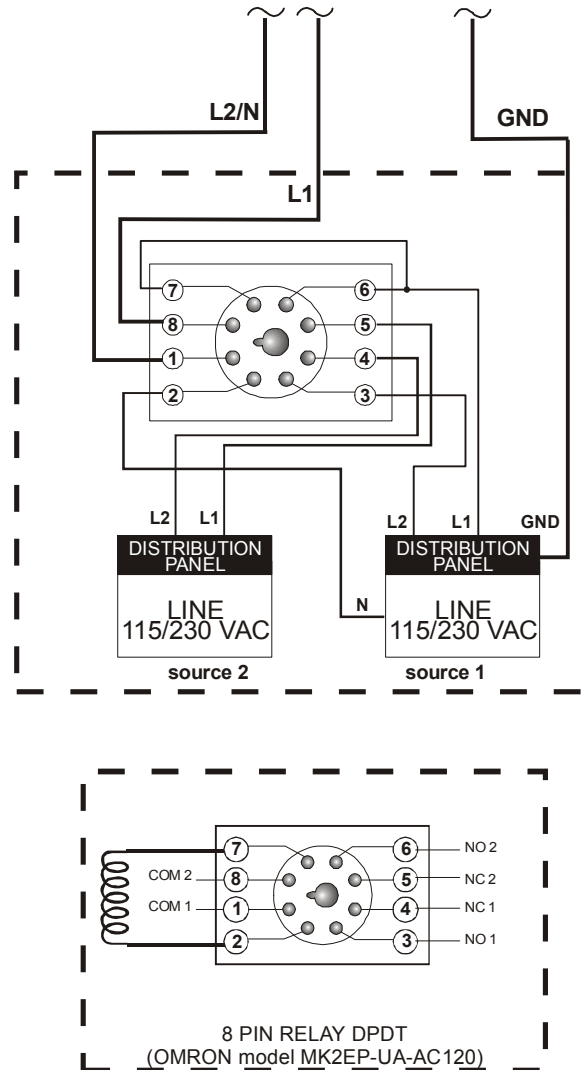


Note: Jumper must be set to 4-20mA mode in order to use the static pressure mode.

Typical Power Backup Wiring

A backup relay (DPDT) connects to the power source 1 in normal operation but will switch to the power source 2 if source 1 is disabled. The backup relay should be selected to ensure it is able to support the required power load.

FIGURE NO. 4 Typical Power Backup Wiring



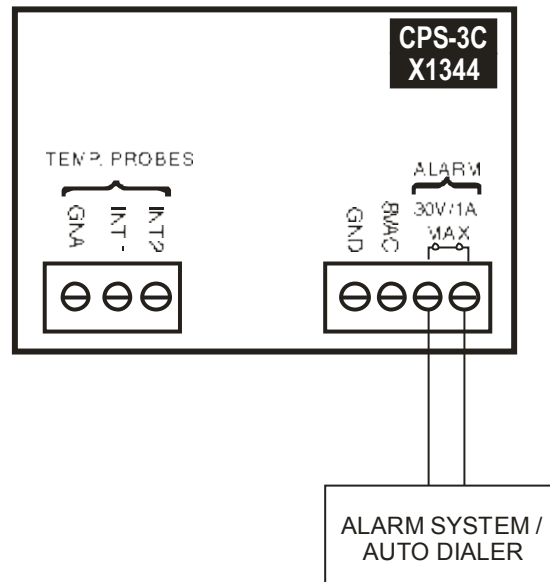
CPS-3C INSTALLATION

Typical Alarm Connection Wiring

The CPS-3C provides a normally closed dry contact to set off an alarm in case low or high temperature condition occurs. Moreover, this same contact can be used to signal a power failure or other malfunctions. It may be connected to an alarm system or directly to a siren and /or auto-dialer.

The relay will activate 6-8 seconds after an alarm is triggered.

FIGURE NO. 5 Typical Alarm Connection Wiring



Powering Up Procedure

Once the CPS-3C is properly mounted on the wall and all modules and sensors connected to the terminal block, perform the following step:

Verify all Connections

Seal all cable entry holes.

Hermetically Close the CPS-3C

Close the front panel and the lower access cover.

Put the power on

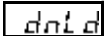
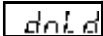
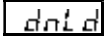
Secure the front panel with a lock

Downloading the Configuration

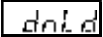



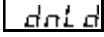
When upgrading your system with a new configuration, you will have to download the configuration.

There are two ways to download a configuration in the CPS-3C controller.

1) Downloading by powering down.

- A. Ensure the power source of the CPS-3C is OFF (flip the circuit breaker on the distribution panel).
- B. Remove the faceplate screws and lift up the cover.
- C. Insert the configuration chip (MMX) into the socket of the main board.
- D. Switch on the power source. The display on the front panel should indicate  for approximately 15 seconds. If  is not displayed, try one more time. If  is still not displayed, remove and replace the configuration chip (MMX).
- E. When the downloading procedure is complete, remove the configuration chip (MMX) and place it in the bottom part of the enclosure or in another safe location. Once the MMX Chip is removed, the CPS-3C starts up and executes the configuration.

2) Downloading while the CPS-3C is powered up.

- A. Remove the faceplate screws and lift up the cover.
- B. Place the MMX chip into the socket of the main board. At this moment, the **MMX Detected** parameter will appear.
- C. Adjust the **MMX Detected** parameter to  and press the  button. The display on the front panel should indicate  for approximately 15 seconds. If  is not displayed, try one more time. If  is still not displayed, remove and replace the configuration chip (MMX).
- D. When the downloading procedure is complete, remove the configuration chip (MMX) and place it in the bottom part of the enclosure or in another safe location. Once the MMX Chip is removed, the CPS-3C starts up and executes the configuration.

WARNING: During this procedure, some components are live and can be dangerous if touched.

Uploading the Configuration

It is possible to upload a configuration into a configuration chip (MMX) in order to save parameters and setup or to backup the configuration.

Here's the procedure to upload a configuration.

- A. Make sure that the CPS-3C powered up.
- B. Remove the faceplate screws and lift up the cover.
- C. Place the MMX chip into the socket of the main board. At this moment, the **MMX Detected** parameter will appear.
- D. Adjust the **MMX Detected** parameter to **UPLD** and press the **SET/CLR** button. The display on the front panel should indicate **UPLD** for approximately 15 seconds. If **UPLD** is not displayed, try one more time. If **UPLD** is still not displayed, remove and replace the configuration chip (MMX).
- E. When the uploading procedure is complete, remove the configuration chip (MMX) and place it in the bottom part of the enclosure or in another safe location. Once the MMX Chip is removed, the CPS-3C will continue to execute the configuration.

WARNING: During this procedure, some components are live and can be dangerous if touched.

CPS-3C Compatible Probes

This is the list of all compatible probes that can be connected with CPS-3C control with a short description of their function.

- **Temperature probe 2004-10K (black cap)**

Temperature probe with a temperature range of -58 to 140°F (-50 to 60°C).

CPS-3C Compatible Modules

This is the list of all compatible modules that can be connected with CPS-3C control with a short description of their function.

Computer interface

- **NET-IN2 Communication Module** (Module inserted into the controller to communicate with the computer interface)
- **RF-IN Communication Module** (Module inserted into the controller for a wireless communication with the computer interface)

Specifications

Storage temperature	-4°F to 131°F (-20°C to 55°C)
Operating temperature	32°F to 113°F (0°C to 45°C)
Humidity	90% maximum Non-condensing
Weight	2.4 lb (1.1 kg)
Size	8 1/2" x 7" x 4 3/4" (22.6 cm x 17.7 cm x 11.5 cm)
Protection index	IP 66
Warranty	2 years
POWER SUPPLY	
Operational voltage range (SW1 @ 115V)	92 to 125VAC
Operational voltage range (SW1 @ 230V)	184 to 250VAC
Operational frequency range	45 to 65 Hz
Power supply circuit consumption (CPU Board)	6 VA
SOURCE 8 VAC	
Voltage range	6.5 to 13VAC
Maximum current allowed	50mA
PROBE INPUTS	
Temperature probe	2004-10K
Static Pressure probe	GE-SP1
Maximum wire length	500 feet (150 m)
Recommended wires	2 conductors, stranded, shielded, AWG #22
ALARM RELAY	
Maximum current	1 A at 30VDC
Delay before activation	Between 6 and 8 seconds
OUTPUT RELAYS	
Maximum Current	1HP @ 240VAC, 1/2HP @ 120VAC, 10A@240VAC
Caution Notice	These relays are rated by UL and CSA at 1HP @ 240VAC, 1/2HP @ 120VAC. However, for outputs requiring frequent activation (ex: inlet working on a timer) it is recommended not to use more than 1/2HP @ 240VAC, 1/4HP @ 120VAC per relay.

Important Notice:

- It is important to have a backup system in case of a system failure.
- Low-voltage and high-voltage wire must be passed through different conduits at least 1 foot (30 cm) apart. If low-voltage and high-voltage conduits must be crossed, the crossing must be at a 90-degree angle.
- All wiring must be made by a certified electrician and conform to local electrical regulations.

Troubleshooting

SYMPTOM	CAUSE	REMEDY
Temperature probe reads <i>LO</i>	Temperature is below -58°F (-50°C). Probe is disconnected or defective.	Check all connections. If the problem persists, and the temperature is within normal range, replace the probe.
Temperature probe reads <i>HI</i>	Temperature is above 140°F (60°C). Probe is short circuited or defective.	Check all connections. If the problem persists, and the temperature is within normal range, replace the probe.
Displays are blank	CPS-3C is not powered. Flat cable between the main and top boards of the CPS-3C is disconnected.	Make sure the control is powered. Make sure the fuse is correct. Make sure the flat cable is connected.

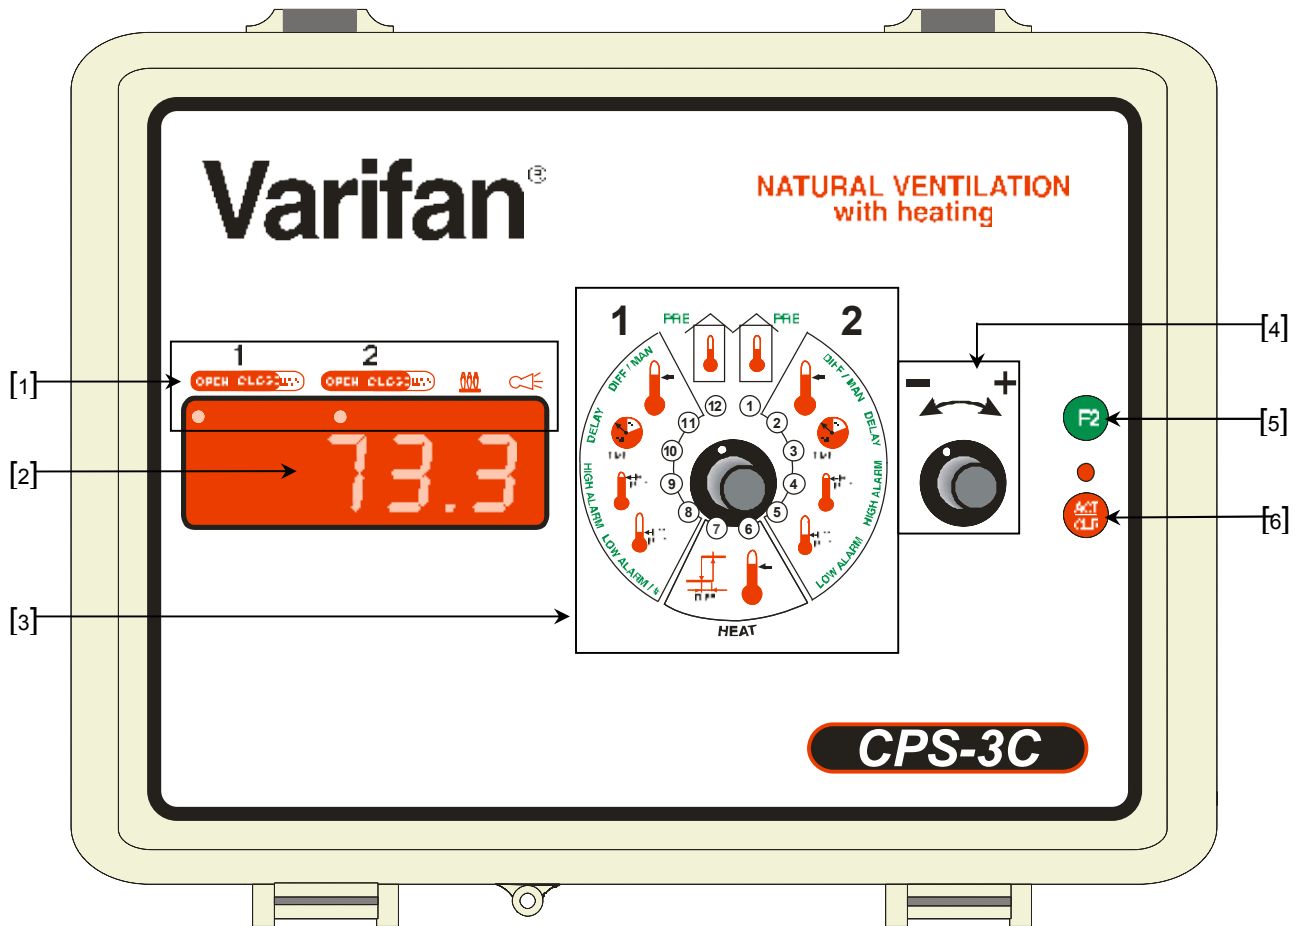
USER'S GUIDE

CPS-3C

SECTION C

SECTION C

Control Description



1. Output LED

These LED indicate the status of an output. A LED comes ON whenever the respective output is active. You can also check if an inlet/curtain is in manual mode.

2. LED Status Windows

The LED status window features a 5 digit LED readout display of temperature in Fahrenheit or Celsius, or other programmable settings. After a setting is selected, its value appears on the LED display. If the value is flashing, it can be changed with the value setting buttons (◻ and ⊕).

3. Parameter Dial

This dial is used to select parameters or parameter groups.

4. Value Setting Button

This dial is used to increase or decrease the value on the LED window. Turn it clockwise to increase the value. Turn it counter clockwise to decrease the value.

5. F2 Button

This button is used to access to secondary function of a parameter group (appears in green around the parameter dial).

6. SET/CLR Button

This button is used to acknowledge a function, set a value (clock) or to clear values (min/max).

Input/Output Table

Inputs	Qty	Outputs	Qty
Inside Temperature	1 or 2	Inlets	2
		Heater	1
		Alarm	1

Equipment

Item	Description	Qty
CPS-3C	2 Air Inlets/Curtains, 1 Heater	1
2004-10k	Temperature Sensor - Black (-58°F to 140°F) (-50°C to 60°C)	1 or 2

Configuration Versions

Version	Date	Min. Proc Version	Modification
V0	26/08/2010	3	New.
V1	07/10/2010	5	Correction on heater when probe(s) defective. Add <i>Wi Farm</i> communication parameters.
V2	21/01/2011	5	Correction of FarmQuest alarm messages.
V3	29/06/2012	5	Increase limits of high and low temperature alarm.

Ventilation system overview

The CPS-3C uses 2 probes used to operate 1 inlet or 2 independent inlets. A heater output is also included on the controller.

When a temperature probe is defective (short-circuited or unplugged), the CPS-3C controller alarm will sound. An alarm check will be made to check for high/low temperature.

Normal Mode Settings

	Probe 2 (POS 1)
---	------------------------

Probe 2 Readout

This parameter displays the actual probe 2 temperature. This parameter may display if probe 2 is defective or unplugged. **Probe 2 Readout** is displayed to the nearest 0.1° from -58.0°F to 140.0°F (-50.0°C to 60.0°C).

	Main Set Point 2 (POS 2)
---	---------------------------------

Main Set Point 2

This parameter is the temperature goal for inlet 2 and the reference for all settings relative to inlet 2. This parameter determines the temperature at which inlet 2 will end its movement cycle. When **Probe 2 Readout** decreases to **Main Set Point 2**, inlet 2 will no longer receive an opening demand. When **Probe 2 Readout** increases to **Main Set Point 2**, inlet 2 will no longer receive a closing demand. The **Main Set Point 2** is adjusted in 0.1° increments from -40.0°F to 100.0°F (-40.0°C to 37.8°C).

Differential 2

This parameter is used to establish the temperature below which inlet 2 will begin a closing or opening cycle. When **Probe 2 Readout** is below **Main Set Point 2 – Differential 2**, inlet 2 will close according to its timer. When **Probe 2 Readout** is above **Main Set Point 2 + Differential 2**, inlet 2 will open according to its timer. This parameter is adjusted in 0.1° increments from 0.5°F to 20.0°F (0.3°C to 11.1°C).

Inlet 2 Manual Operation

This parameter is used to override the controller's calculated demands and move the inlet in a given direction. If this parameter is set to (Auto), the inlet will follow the demand the controller has calculated according to temperature readings. If this parameter is set to (Hold), the inlet will not move. If this parameter is set to (Open), the inlet will open continuously. If this parameter is set to (Close), the inlet will close continuously.



Max Run Time 2 (POS 3)

Max Run Time 2

This parameter is used to establish the duration of the run time for inlet 2 when it receives an opening or closing demand. When **Probe 2 Readout** is above **Main Set Point 2 + Differential 2**, inlet 2 will wait for **Delay 2** before opening for the calculated run time. When **Probe 2 Readout** is below **Main Set Point 2 - Differential 2**, inlet 2 will wait for **Delay 2** before closing for the calculated run time. The opening run time is determined by **Probe 2 Readout**, modulating from **Main Set Point 2 + Differential 2** (0 seconds) to **Main Set Point 2 + Differential 2 + 6.0°F(3.3°C)** (**Max Run Time 2**). The closing run time is determined by **Probe 2 Readout**, modulating from **Main Set Point 2 - Differential 2** (0 seconds) to **Main Set Point 2 - Differential 2 - 6.0°F(3.3°C)** (**Max Run Time 2**). This parameter is adjusted in 1-second increments from 1 to 120 seconds.

Delay 2 OFF d

This parameter is used to establish the duration of the idle time for inlet 2 when it receives an opening or closing demand. When inlet 2 receives an opening or closing demand, will wait for **Delay 2** before moving according to its calculated run time. This parameter is adjusted in 1-second increments from 5 to 600 seconds.



Probe 2 Max (POS 4)

Probe 2 Maximum

This parameter displays the highest value reached by **Probe 2** since the CPS-3C was powered up or since this parameter was last cleared. To reset this value to the actual **Probe 2 Readout**, press the SET/CLR button. The **Probe 2 Maximum** is displayed to the nearest 0.1° from -58.0°F to 140.0°F (-50.0°C to 60.0°C).

High Alarm 2 Hr PL

This parameter is used to establish the relative temperature at which a high alarm condition will occur. When **Probe Readout 2** is above the **Main Set Point + High Alarm 2**, a high alarm condition will occur. This parameter is adjusted in 0.1° increments from 0.5°F to 90.0°F (0.3°C to 50.0°C).



Probe 2 Min (POS 5)

Probe 2 Minimum

This parameter displays the lowest value reached by **Probe 2** since the CPS-3C was powered up or since this parameter was last cleared. To reset this value to the actual **Probe 2 Readout**, press the **SET/CLR** button. The **Probe 2 Minimum** is displayed to the nearest 0.1° from -58.0°F to 140.0°F (-50.0°C to 60.0°C).

Low Alarm 2

This parameter is used to establish the relative temperature at which a low alarm condition will occur. When **Probe Readout 2** is below the **Main Set Point** + **Low Alarm 2**, a low alarm condition will occur. This parameter is adjusted in 0.1° increments from -90.0°F to -0.5°F (-50.0°C to -0.3°C).



Heating Set Point (POS 6)

Heating Set Point

This parameter sets the temperature at which the heater will activate. If 2 zones are used, the heater will follow the average temperature of **Probe Readout 2** and **Probe Readout 1**, otherwise, the heater will follow **Probe Readout 1**. If the probes controlling the heater are defective, it will be forced to deactivate. When the temperature controlling the heater is equal to or below **Heating Set Point**, the heater will activate and the inlets will continuously close. This parameter is adjusted in 0.1° increments from 41.0°F to 112.0°F (22.8°C to 62.2°C).



Heating Differential (POS 7)

Heating Differential

This parameter determines the relative temperature at which the heater will deactivate. When the temperature controlling the heater is equal to or above **Heating Set Point** + **Heating Differential**, the heater will deactivate. This parameter is adjusted in 0.1° increments from 0.5°F to 20.0°F (0.3°C to 11.1°C).



Probe 1 Min (POS 8)


Probe 1 Minimum

This parameter displays the lowest value reached by **Probe 1** since the CPS-3C was powered up or since this parameter was last cleared. To reset this value to the actual **Probe 1 Readout**, press the **SET/CLR** button. The **Probe 1 Minimum** is displayed to the nearest 0.1° from -58.0°F to 140.0°F (-50.0°C to 60.0°C).

Low Alarm 1 **Lo AL**

This parameter is used to establish the relative temperature at which a low alarm condition will occur. When **Probe Readout 1** is below the **Main Set Point + Low Alarm 1**, a low alarm condition will occur. This parameter is adjusted in 0.1° increments from -90.0°F to -0.5°F (-50.0°C to -0.3°C).

Alarm Code **ALCODE**

This setting displays the alarm condition. This parameter displays 0 when no errors have been detected. This indicates that the controller is operating properly. The alarm LED () on the faceplate will be lit up if an alarm code is actually displayed. The alarm code refers to the following table.

Alarm Code List:


Alarm Code	Description
1	Probe 1 Too Low
2	Probe 2 Too Low
3	Probe 1 Too High
4	Probe 2 Too High
5	Probe 1 Defective
6	Probe 2 Defective
101	The controller has reset 10 times and each reset was less than 15 minutes apart from the last one.
102	If this alarm code appears, contact your distributor
103	If this alarm code appears, contact your distributor



Probe 1 Max (POS 9)

Probe 1 Maximum


This parameter displays the highest value reached by **Probe 1** since the CPS-3C was powered up or since this parameter was last cleared. To reset this value to the actual **Probe 1 Readout**, press the **SET/CLR** button. The **Probe 1 Maximum** is displayed to the nearest 0.1° from -58.0°F to 140.0°F (-50.0°C to 60.0°C).

High Alarm 1 

This parameter is used to establish the relative temperature at which a high alarm condition will occur. When **Probe Readout 1** is above the **Main Set Point + High Alarm 1**, a high alarm condition will occur. This parameter is adjusted in 0.1° increments from 0.5°F to 90.0°F (0.3°C to 50.0°C).

**Max Run Time 1 (POS 10)****Max Run Time 1**

This parameter is used to establish the duration of the run time for inlet 1 when it receives an opening or closing demand. When **Probe 1 Readout** is above **Main Set Point 1 + Differential 1**, inlet 1 will wait for **Delay 1** before opening for the calculated run time. When **Probe 1 Readout** is below **Main Set Point 1 - Differential 1**, inlet 1 will wait for **Delay 1** before closing for the calculated run time. The opening run time is determined by **Probe 1 Readout**, modulating from **Main Set Point 1 + Differential 1** (0 seconds) to **Main Set Point 1 + Differential 1 + 6.0°F(3.3°C)** (**Max Run Time 1**). The closing run time is determined by **Probe 1 Readout**, modulating from **Main Set Point 1 - Differential 1** (0 seconds) to **Main Set Point 1 - Differential 1 - 6.0°F(3.3°C)** (**Max Run Time 1**). This parameter is adjusted in 1-second increments from 1 to 120 seconds.

Delay 1 

This parameter is used to establish the duration of the idle time for inlet 1 when it receives an opening or closing demand. When inlet 1 receives an opening or closing demand, will wait for **Delay 1** before moving according to its calculated run time. This parameter is adjusted in 1-second increments from 5 to 600 seconds.

**Main Set Point 1 (POS 11)****Main Set Point 1**

This parameter is the temperature goal for inlet 1 and the reference for all settings relative to inlet 1. This parameter determines the temperature at which inlet 1 will end its movement cycle. When **Probe 1 Readout** decreases to **Main Set Point 1**, inlet 1 will no longer receive an opening demand. When **Probe 1 Readout** increases to **Main Set Point 1**, inlet 1 will no longer receive a closing demand. The **Main Set Point 1** is adjusted in 0.1° increments from -40.0°F to 100.0°F (-40.0°C to 37.8°C).

Differential 1

This parameter is used to establish the temperature below which inlet 1 will begin a closing or opening cycle. When **Probe 1 Readout** is below **Main Set Point 1 – Differential 1**, inlet 1 will close according to its timer. When **Probe 1 Readout** is above **Main Set Point 1 + Differential 1**, inlet 1 will open according to its timer. This parameter is adjusted in 0.1° increments from 0.5°F to 20.0°F (0.3°C to 11.1°C).

Inlet 1 Manual Operation

This parameter is used to override the controller's calculated demands and move the inlet in a given direction. If this parameter is set to (Auto), the inlet will follow the demand the controller has calculated according to temperature readings. If this parameter is set to (Hold), the inlet will not move. If this parameter is set to (Open), the inlet will open continuously. If this parameter is set to (Close), the inlet will close continuously.

**Probe 1 (POS 12)****Probe 1 Readout**

This parameter displays the actual probe 1 temperature. This parameter may display if probe 1 is defective or unplugged. **Probe 1 Readout** is displayed to the nearest 0.1° from -58.0°F to 140.0°F (-50.0°C to 60.0°C).

System Mode Settings

(POS 1)

Clock Hour

This parameter gives the time of day in the format chosen in **Clock Format**. To adjust the time of day, press the SET/CLR button. At this moment, the minutes will be adjustable. Press the F2 button to toggle between hour and minute adjustments. Press the SET/CLR button once again or change parameters with the parameter selection knob once the adjustments are finished.

Clock Format Hr Fr

This parameter is used to set the format in which the time of day will be displayed. Is this parameter is set to 24H, the **Clock** parameter will be displayed in the 24-hour format. Is this parameter is set to A-P, the **Clock** parameter will be displayed in the AM/PM format.

(POS 2)

Growth Day 9 day

This parameter is use to adjust the growth day of the ECS-3C controller. The **Growth Day** is used for the PC interface's history. The **Growth Day** is adjusted in 1-day increments from 0FF, day -10 to day 365.

(POS 9)

Display Language Lang

This parameter is used to select the language used by the CPS-3C. Is this parameter is set to Eng, the configuration will use the English language. Is this parameter is set to FrA, the configuration will use the French language.

(POS 10)

RF Channel RF CH

This parameter is used to select one of the 16 frequencies of the WiFarm network or deactivates wireless communication mode. If this parameter is set to 0FF, other wireless communication parameters will disappear. This parameter can be adjusted to 0FF, 1 to 16.

Unit ID 1111

This parameter is used to select the identification number that will be used when communicating with the remote access software. Each controller must have a unique PC identification number. This parameter may be adjusted to any value from 1 to 250.

RF Network RF net

This parameter is used to identify a WiFarm network. A WiFarm network is formed when the **RF Network** is set to the same value as the RF Address of the RF communication card of the controller designated to be the network master (ex. WebGate in most installations). Other controllers can join the existing network by adjusting RF Network to the RF Address of that same network. This parameter is adjusted digit-by-digit, allowing faster modification for very high numbers. Press the SET/CLR button so that the parameter's first digit blinks. Modify that digit using the adjustment knob. Press the F2 button to navigate through the different digits. Press the SET/CLR button once again to end parameter modification. This parameter can be adjusted to any value from 0 to 32767.

RF Address RF Ad

This parameter displays the number (address) associated to the RF card inserted in the controller. A unique number is given to each RF card of the WiFarm network. There is a unique RF Address associated to each RF card. The RF Address also appears on the sticker present on the RF card. The address can be any value from 0 to 32767.

Tech Param Display TECH PARM

This parameter is reserved for the manufacturer's technical support personnel.

Tech Param Result TECH PARM

This parameter is reserved for the manufacturer's technical support personnel.

(POS 11)**Configuration Version** CONF

This parameter displays the version of the configuration actually used.

Processor Version PROC











This parameter displays the version of the processor actually used.












(POS 12)**System Parameters** SYSTEM

This parameter indicates that the CPS-3C is in system parameter mode.

Parameter Table

Normal Mode Settings (Accessible when SW2 is set to OFF)

	Parameters	Default	Range
(POS 1) PROBE 2 	Probe 2 Readout	—	-58.0 to 140.0°F (-50.0 to 60.0°C)
(POS 2) MAIN SET POINT 2 	Main Set Point 2	67.0°F (19.4°C)	-40.0 to 100.0°F (-40.0 to 37.8°C)
	[F2] –  – Differential 2	2.0°F (1.1°C)	0.5 to 20.0°F (0.3 to 11.1°C)
	[F2] – Inlet 2 Manual Operation	AUTO	AUTO, HOLD, CLOSE, HOLD, OPEN
(POS 3) OPEN TIME 2 	Open Time 2	3 seconds	1 to 120 seconds
	[F2] –  – Open Delay 2	120 seconds	5 to 600 seconds
(POS 4) PROBE 2 MAX 	Probe 2 Maximum	—	-58.0 to 140.0°F (-50.0 to 60.0°C)
	[F2] –  – High Alarm 2	10.0°F (5.6°C)	0.5 to 90.0°F (0.3 to 50.0°C)
(POS 5) PROBE 2 MIN 	Probe 2 Minimum	—	-58.0 to 140.0°F (-50.0 to 60.0°C)
	[F2] –  – Low Alarm 2	-10.0°F (-5.6°C)	-90.0 to -0.5°F (-50.0 to -0.3°C)
(POS 6) HEATING SET POINT 	Heating Set Point	64.0°F (17.8°C)	41.0°F to 112.0°F (22.8°C to 62.2°C)

(POS 7) HEATING DIFFERENTIAL 	Heating Differential	2.0°F (1.1°C)	0.5°F to 20.0°F (0.3°C to 11.1°C)
(POS 8) PROBE 1 MIN 	Probe 1 Minimum	—	-58.0 to 140.0°F (-50.0 to 60.0°C)
	[F2] –  – Low Alarm 1	-10.0°F (-5.6°C)	-90.0 to -0.5°F (-50.0 to -0.3°C)
	[F2] –  – Alarm Code	—	See parameter description
(POS 9) PROBE 1 MAX 	Probe 1 Maximum	—	-58.0 to 140.0°F (-50.0 to 60.0°C)
	[F2] –  – High Alarm 1	10.0°F (5.6°C)	0.5 to 90.0°F (0.3 to 50.0°C)
(POS 10) OPEN TIME 1 	Open Time 1	3 seconds	1 to 120 seconds
	[F2] –  – Open Delay 1	120 seconds	5 to 600 seconds
(POS 11) MAIN SET POINT 1 	Main Set Point 1	67.0°F (19.4°C)	-40.0 to 100.0°F (-40.0 to 37.8°C)
	[F2] –  – Differential 1	2.0°F (1.1°C)	0.5 to 20.0°F (0.3 to 11.1°C)
	[F2] – Inlet 1 Manual Operation	AUTO	AUTO, HOLD, CLOSE, HOLD, OPEN
(POS 12) PROBE 1 	Probe 1 Readout	—	-58.0 to 140.0°F (-50.0 to 60.0°C)

System Mode Settings (Accessible when SW2 is set to ON)

	Parameters	Default	Range
(POS 1)	Time – Clock	—	—
	[F2] – Time Fmt – Clock Format	24hr	AM-PM, 24hr
(POS 2)	W 243 – Growth Day	OFF	OFF, -10 to 365
(POS 3)	—	—	—
(POS 4)	—	—	—
(POS 5)	—	—	—
(POS 6)	—	—	—
(POS 7)	—	—	—
(POS 8)	—	—	—
(POS 9)	Lang – Display Language	Eng	Eng, Fra
(POS 10)	RF CH – RF Channel	OFF	OFF, 1 to 16
	[F2] – U ID – Unit ID	1	1 to 250
	[F2] – RF Net – RF Network	0	0 to 32767
	[F2] – RF Ad – RF Address	—	
	[F2] – Tech Pm D – Tech Param Display	OFF	OFF, 1 to 12
	[F2] – Tech Pm R – Tech Param Result	—	—
(POS 11)	Ver – Configuration Version	—	—
	[F2] – Proc – Processor Version	—	—
(POS 12)	55550 – System Parameters	—	—

DIP Switches and Slide Switches Table

	Switches	Default	Settings
SLIDE SWITCHES	(SW1) – Parameters Protected	OFF	ON/OFF
	(SW2) – System Parameters	OFF	ON/OFF
DIP SWITCHES	(DIPSW1) – Temperature Unit	ON (°C)	ON= °C / OFF = °F
	(DIPSW2) – Future Use	—	—
	(DIPSW3) – Zone	ON (2 Zones)	ON = 2 Zones OFF = 1 Zone
	(DIPSW4) – Future Use	—	—

Additional information on parameters

The following is a more detailed description of general-purpose parameters.

Time of Day (time clock)

The CPS-3C comes with its own integrated time clock. This feature is appreciated by users who want to know the current time of day. Note that if a power failure occurs, the clock will not run and will start back at the time the power failure occurred.

The following instructions show how to change the time of day on the control:

The time is displayed in HH:MM format and does not flash. Press the **SET/CLR** button to access clock adjustment mode. At this moment, the minutes will flash and be adjustable. Press the **F2** button to toggle between hour and minute adjustments. Press the **SET/CLR** button or change the parameter selection knob position to exit the clock adjustment mode.

INDEX / WARRANTY CPS-3C SECTION D

TABLE OF CONTENTS

	Section A
WARNINGS AND PRECAUTIONS.....	2
Wiring Diagram Temperature Mode.....	4
Wiring Diagram Static Pressure Mode.....	5
Electrician's notes.....	5

TABLE OF CONTENTS

	Section B
Unpacking.....	7
Mounting Hardware Required	7
General installation guidelines	8
CPS-3C Control.....	8
Electrical Cables.....	8
Electrical Power.....	9
Mounting	9
Connection Procedure	10
Detailed Wiring Diagrams	10
Typical Sensor Wiring for Probes	10
Typical Power Backup Wiring	11
Typical Alarm Connection Wiring.....	12
Powering Up Procedure.....	13
Verify all Connections.....	13
Hermetically Close the CPS-3C.....	13
Put the power on	13
Secure the front panel with a lock.....	13
Downloading the Configuration.....	14
Uploading the Configuration	15
CPS-3C Compatible Probes	16
CPS-3C Compatible Modules	16
Specifications.....	17
Troubleshooting	18

TABLE OF FIGURES

FIGURE NO. 1 Mounting Position and Devices.....	9
FIGURE NO. 2 Typical Temperature Probe Wiring	10
FIGURE NO. 3 Typical Static Pressure Probe Wiring.....	10
FIGURE NO. 4 Typical Power Backup Wiring	11
FIGURE NO. 5 Typical Alarm Connection Wiring	12

TABLE OF CONTENTS

	Section C
Control Description	20
Input/Output Table.....	22
Equipment.....	22
Configuration Versions	22
Ventilation system overview	23
Normal Mode Settings	24
Probe 2 (POS 1).....	24
Main Set Point 2 (POS 2)	24
Max Run Time 2 (POS 3)	25
Probe 2 Max (POS 4)	25
Probe 2 Min (POS 5)	26
Heating Set Point (POS 6).....	26
Heating Differential (POS 7)	26
Probe 1 Min (POS 8)	27
Probe 1 Max (POS 9)	27
Max Run Time 1 (POS 10)	28
Main Set Point 1 (POS 11)	28
Probe 1 (POS 12).....	29
System Mode Settings	30
(POS 1)	30
(POS 2)	30
(POS 9)	30
(POS 10)	30
(POS 11)	31
(POS 12)	31
Parameter Table	32
Normal Mode Settings (Accessible when SW2 is set to OFF).....	32
System Mode Settings (Accessible when SW2 is set to ON).....	34
DIP Switches and Slide Switches Table	35
Additional information on parameters	36
Time of Day (time clock).....	36

TABLE OF CONTENTS

	Section D
Limited Warranty.....	40

Limited Warranty

The manufactured equipment and supplied components have gone through rigorous inspection to assure optimal quality of product and reliability. Individual controls are factory tested under load, however the possibility of equipment failure and/or malfunction may still exist.

For service, contact your local retailer or supplier. The warranty period shall be for two years from manufacturing date. Proof of purchase is required for warranty validation.

In all cases, the warranty shall apply only to defects in workmanship and specifically exclude any damage caused by over-voltage, short circuit, misuse, acts of vandalism, lightning, fortuitous events, acts of God, flood, fire, hail or any other natural disaster. Any unauthorized work, modification or repair on this product automatically voids the warranty and disclaims the manufacturer from all responsibility.

The manufacturer assumes only those obligations set forth herein, excluding all other warranties or obligations. This warranty stipulates that in all cases the manufacturer shall be liable only for the supply of replacement parts or goods and shall not be liable for any personal injury, damages, loss of profits, interrupted operations, fines for infringement of the law or damages to the production of the PURCHASER and the PURCHASER shall take up the defence and hold the manufacturer faultless regarding any legal or extra legal proceedings, notice, or claim by the customer or by a third party, and regarding any legal and extra legal expenses and fees brought forward on by such damages.

CPS-3C VER:1.3
April 1, 2014